



R&M Materials Handling, Inc.
4501 Gateway Boulevard
Springfield, Ohio 45502
☎ : (937) 328-5100
FAX: (937) 325-5319

1 Instructions

The instructions needed for the safe and effective installation, operation and maintenance of the hoist are included in the hoist delivery. The hoist itself is also provided with labels and markings. The instructions are issued on paper and/or on CD-ROM. The instructions for using digital CD-ROMs are printed on the packaging.



Read all the instructions supplied with the hoist before starting to install and commission the hoist.



It is essential for the safety of people and property that the hoist operator, the hoist serviceman and the personnel in charge of hoist operation and servicing are familiar with and comply with the safe working principles described in the instructions supplied with the hoist.



Keep the instructions in a safe place for future reference.

1.1 Symbols and abbreviations

The following symbols are used in the instructions:



Warning!



Caution