



# DIGICHAIN



## INSTALLATION AND MAINTENANCE INSTRUCTIONS

Job Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

(RECORD UNIT SERIAL NUMBER FOR FUTURE REFERENCE)



R&M Materials Handling, Inc  
Springfield, Ohio USA  
☎: 800 955-9967  
[www.rmhoist.com](http://www.rmhoist.com)

LoadMate Chain Hoist  
DIGICHAIN Instruction Manual  
June 2003

---

**This manual is supplemental to the [LoadMate](#) Chain Hoist Installation, Operation, and Maintenance Instruction manual.**

Before proceeding with the installation, operation or maintenance of the equipment it is important that the installation, operating, and maintenance personnel read this bulletin carefully in order to ensure the safe and efficient use of the equipment.

If any instructions are unclear or if the hoist manual is not available, contact the manufacturer or distributor of the hoist equipment before attempting to install or use the equipment.

[R&M Materials Handling, Inc](#)  
4501 Gateway Boulevard  
Springfield, OH 45502  
Tel. 937-328-5100  
Fax 937-325-5319

Visit our website: [www.rmhoist.com](http://www.rmhoist.com)



---

1	DESCRIPTION – TECHNICAL CHARACTERISTICS .....	4
1.1	Technical Data .....	4
1.2	Environmental Data.....	4
1.3	Function Tests.....	4
1.4	Dimensions .....	5
1.5	Setup.....	6
2	ELECTRICAL .....	7
2.1	Electrical Diagram of the Pendant .....	7
3	SPARE PARTS .....	8