




R&M Materials Handling, Inc  
Springfield, Ohio USA  
☎: 800 955-9967  
[www.rmhoist.com](http://www.rmhoist.com)

LoadMate® Chain Hoist  
LM05 Series II Manual  
Helical Gearing  
April 2005

# LM05 SERIES II

## Helical Gearing

### LoadMate® CHAIN HOIST

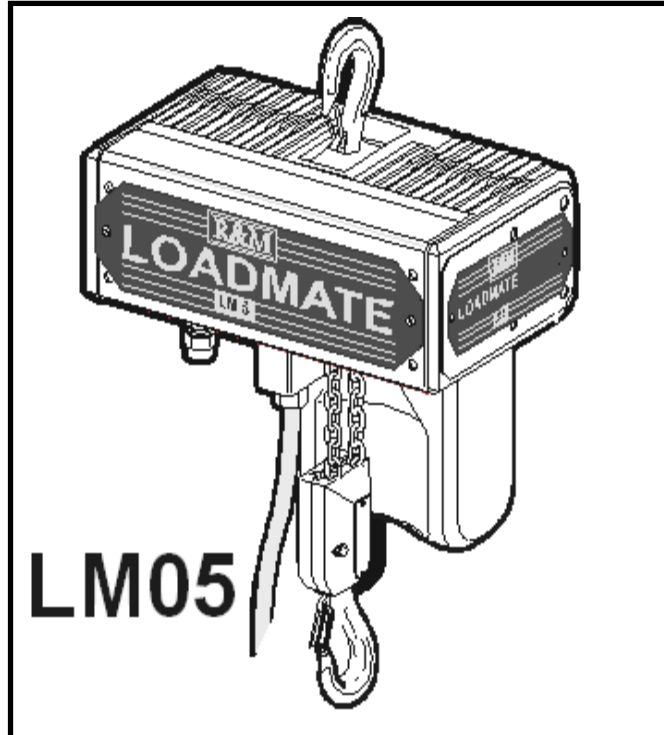

## INSTALLATION & MAINTENANCE MANUAL

JOB NO.: \_\_\_\_\_

SERIAL NO.: \_\_\_\_\_

(RECORD HOIST SERIAL NUMBER FOR FUTURE REFERENCE)



® R&M Materials Handling, Inc  
Springfield, Ohio USA  
☎: 800 955-9967  
[www.rmhoist.com](http://www.rmhoist.com)

LoadMate® Chain Hoist  
LM05 Series II Manual  
Helical Gearing  
April 2005

---

LEAVE THIS PAGE BLANK



## TABLE OF CONTENTS

<b>1</b>	<b>INTRODUCTION.....</b>	<b>1</b>
1.1	Contact Information .....	1
1.2	Warranty.....	1
1.3	Disclaimer.....	1
1.4	Safety .....	2
1.5	Placards and Instructions .....	4
<b>2</b>	<b>INSTALLATION.....</b>	<b>5</b>
2.1	General.....	5
2.2	Lubrication.....	5
2.3	Mounting.....	5
2.4	Load Hook Throat Opening .....	6
2.5	Electrical Connection .....	6
2.6	Three Phase Power Connections.....	7
2.7	Single Phase Power Connections .....	8
<b>3</b>	<b>INITIAL START-UP .....</b>	<b>9</b>
3.1	General.....	9
3.2	Correcting the Direction of Hook Travel .....	9
3.3	Operational Checks – No Load .....	9
3.4	Operational Checks – With Load.....	10
<b>4</b>	<b>HOIST OPERATION.....</b>	<b>11</b>
<b>5</b>	<b>MAINTENANCE.....</b>	<b>13</b>
5.1	Basic Hoist Construction .....	13
5.2	Motor / Body .....	13
5.3	Hoist Motor Brake and Load-Limiting Device .....	14
5.3.1	Slip Clutch Operation .....	14
5.3.2	Slip Clutch Adjustment after Installation.....	16
5.3.3	Hoist Motor Brake Adjustment (See Figure 5.2) .....	17
5.4	Load Chain .....	17
5.5	Maintenance Inspection .....	17
5.6	Load Chain Specifications (see Figure 5.3) .....	19
5.7	Removing the Load Chain.....	19
5.8	Installing the Load Chain.....	20
5.9	Fall Stop Assembly.....	21
5.10	Removing fall stop (Figure 5.6) .....	21
5.11	Installing fall stop (Figure 5.6) .....	21
5.12	Chain Container .....	22
5.13	Upper and Lower Travel Safety Limit Switch .....	23
5.14	Upper and Lower Rotary Travel Limit Switch (Optional Only on 3-Phase Units) .....	23
5.15	Hooks .....	24
5.16	Hook Inspection .....	25
5.17	Top Hook.....	26
5.18	Control Changes and Fuses.....	27
5.19	Three-phase Control Panel – Two-speed Hoist – 208/230/460 Volts .....	29
5.20	Three-phase – Two-speed Hoist – 208/230/460 volts – Power Circuit .....	30
5.21	Three-phase Two-speed Hoist – 208/230/460 volts – Control Circuit.....	31
5.22	Three-phase Two-speed Hoist – 208/230/460 volts – Push Button .....	32
5.23	Three-phase Control Panel – Two-speed Hoist – 575 volts.....	33
5.24	Three-phase Wiring Diagram – Two-speed Hoist – 575 volts – Power Circuit .....	34



5.25	Three-phase - Two-speed Hoist – 575 volts – Control Circuit.....	35
5.26	Three-phase - Two-speed Hoist – 575 volts – Push Button.....	36
5.27	Three Phase Control Panel – Single Speed Hoist – 208/230 volts .....	37
5.28	Three-phase Control Panel – Single Speed Hoist – 460 volts .....	38
5.29	Three Phase – Single Speed Hoist – 208/230/460 volts – Power Circuit .....	39
5.30	Three-phase Single Speed Hoist – 208/230/460 volts – Control Circuit .....	40
5.31	Three-phase Single Speed Hoist – 208/230/460 volts – Push Button .....	41
5.32	Single-phase Control Panel – 115V Power Supply .....	42
5.33	Single-phase Wiring Diagram – 115V Power Supply .....	43
5.34	Single-phase Wiring Diagram – Control Circuit.....	45
5.35	Single-phase Wiring Diagram – Push Button .....	46
<b>6</b>	<b>PREVENTATIVE MAINTENANCE .....</b>	<b>47</b>
6.1	Recommended Periodic Maintenance and Inspection Table .....	47
6.2	Lubrication.....	48
6.3	Recommended technical support for various spare parts .....	49
6.4	Screw Tightening Torque (lb-ft) Specification .....	49
6.5	Troubleshooting .....	50
<b>7</b>	<b>PARTS ILLUSTRATIONS .....</b>	<b>51</b>
7.1	Hoist Body – Three Phase Power Supply .....	51
7.2	Hoist Body – Single Phase Power Supply.....	53
7.3	Helical Gear Mechanism & Brake .....	55
7.4	Lifting Assembly .....	56
7.5	Chain Guide Assembly – With Limit Switches.....	58
7.6	Controls.....	59
7.7	Rotary Limit Switch.....	60
7.8	Push Button Assembly – Vertical Pairs of Buttons.....	61
7.9	Push Button Assembly – Horizontal Pairs of Buttons.....	63