

Installation  
Operating  
Maintenance &  
Spare Parts

**End Truck**

**RT/RS**

**Manual**





R&M Materials Handling, Inc.  
 4501 Gateway Boulevard  
 Springfield, Ohio 45502  
 ☎ : (937) 328-5100  
 FAX: (937) 325-5319

EN PS03447 MASTER Rev: 18.3.2003



**Read the instructions supplied with the hoist before installation and commissioning.**



Keep the instructions in a safe place for future reference.

Table of content

<b>1 Safety instructions.....</b>	<b>3</b>	3.2 Main components.....	7
1.1 Safety instructions for preparing to install the end truck .....	3	3.3 Assembling the end truck.....	7
1.2 Safety instructions for installing and operating the end truck .....	3	3.4 Inspection and service procedure for end truck 8	
1.3 Safety instructions for servicing the end truck 3		3.5 Removing and replacing the drive wheel....	8
<b>2 End Truck RT09/RT11/RS11/RT14/RS14.....</b>	<b>4</b>	3.6 Removing and replacing the idler wheel.....	8
2.1 General .....	4	3.7 Inspection and servicing intervals .....	8
2.2 Main components .....	4	<b>4 Lubricants.....</b>	<b>10</b>
2.3 Assembling the end truck.....	4	4.1 Alternative lubricants .....	10
2.4 Inspection and service procedure for end truck 5		<b>5 Recommended tightening torques.....</b>	<b>11</b>
2.5 Removing and replacing the drive wheel ....	5	<b>6 Spare Parts .....</b>	<b>12</b>
2.6 Removing and replacing the idler wheel ....	5	6.1 RT09.....	12
2.7 Inspection and servicing intervals .....	5	6.2 RT11/RS11.....	14
<b>3 End Truck RT20/RT25/RT32/RT50.....</b>	<b>7</b>	6.3 RT14/RS14.....	16
3.1 General .....	7	6.4 RT20.....	18
		6.5 RT25.....	21
		6.6 RT32.....	24
		6.7 RT50.....	27