

Installation
Operation &
Maintenance

GES Drive Manual





R&M Materials Handling, Inc.
 4501 Gateway Boulevard
 Springfield, Ohio 45502
 ☎ : (937) 328-5100
 FAX: (937) 325-5319

EN PS01645 Rev: 07.10.02



Read the instructions supplied with the hoist before installation and commissioning.



Keep the instructions in a safe place for future reference.

Table of content

1 Instructions.....	3	3.6 Removing the drive	7
1.1 Symbols and abbreviations	3	4 MF06 motor with Compact or DC brake.....	7
2 Safety instructions.....	3	4.1 Adjustment of Compact-brake air gap	8
2.1 Safety instructions for preparing to install		4.2 Removing the Compact-brake	8
the drive.....	3	4.3 Removing and inspection of DC brake	8
2.2 Safety instructions for installing and		4.4 Removing the motor.....	9
operating the drive	3	5 MF07 and MF10 motor.....	9
2.3 Safety instructions for servicing the drive ...	4	5.1 Removing and inspection of DC brake	10
3 GES Drive.....	4	5.2 Removing the motor.....	10
3.1 General	5	6 Lubricants.....	10
3.2 Mounting position of the drive	5	6.1 Alternative lubricants	11
3.3 Assembling the drive	5	7 Recommended tightening torques.....	11
3.4 Start-up procedure.....	6	8 Inspection and servicing intervals.....	11
3.5 Inspection and service procedure for Drive 6	6		