



RaCon Series II

Radio remote control





Read the instructions supplied with the products before installation and commissioning.



Keep the instructions in a safe place for future reference.

Table of content

1 Description	3	5.2 Entering the Service mode.....	14
2 Safety Precautions.....	4	5.3 Keys for moving within the Menus.....	15
2.1 What you must do	4	5.4 Switching from Tared Load to Actual Load.....	15
2.2 What you must not do	4	5.5 Resetting the Tared Load.....	15
3 Installation	5	5.6 Exiting Service mode.....	15
3.1 The BC60K battery charger.....	5	5.7 Messages originated in the receiver.....	16
4 Use	6	6 Maintenance	17
4.1 Receiver	6	6.1 Precautions.....	17
4.2 Receiver's RAD-RS outputs	9	6.2 Preventive maintenance	17
4.3 Receiver's RAD-RF outputs	10	6.3 Locating Break-downs	17
4.4 Starting-up.....	11	6.3.1 Transmitter	17
4.5 Spurious Disturbance	13	6.3.2 Receiver	18
5 Service Mode - How To Access to the HoistMonitor in RADF13 (RaCon II Plus) System.....	14		
5.1 General Description of Service Mode.....	14		