




R&M Materials Handling, Inc
Springfield, Ohio USA
☎: 800 955-9967
www.rmhoist.com

Electric Chain Hoist Operator's Manual
LoadMate® Electric Chain Hoists

February 2005

LoadMate® ELECTRIC CHAIN HOISTS

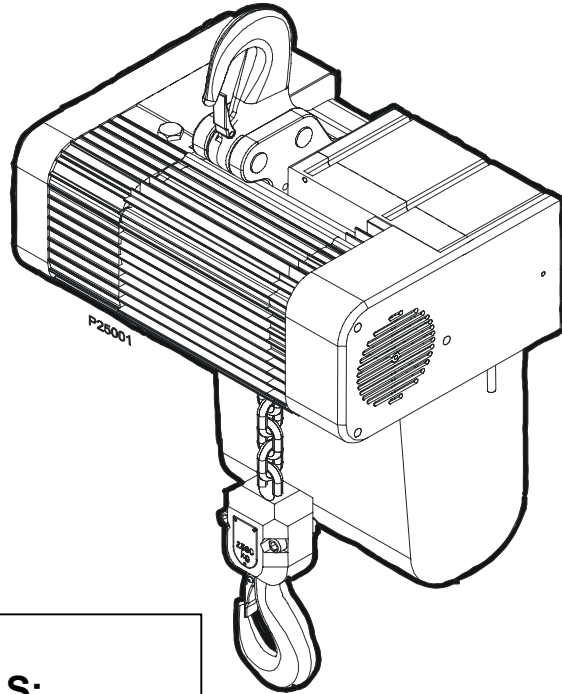

MODELS:
LM1 - LM05 - LM10
LM16/20/25

OPERATOR'S MANUAL



® R&M Materials Handling, Inc
Springfield, Ohio USA
☎: 800 955-9967
www.rmhoist.com

Electric Chain Hoist Operator's Manual
LoadMate® Electric Chain Hoists

February 2005

THIS PAGE TO REMAIN BLANK



TABLE OF CONTENTS

1	INTRODUCTION.....	1
1.1	CONTACT INFORMATION.....	1
1.2	DISCLAIMER OF WARRANTY.....	1
1.3	DISCLAIMER OF LIABILITY.....	1
1.4	INDEMNITY.....	1
2	SCOPE AND PURPOSE	2
2.1	SCOPE	2
2.2	PURPOSE.....	2
2.3	INSTALLATION AND MAINTENANCE MANUAL.....	2
3	SAFETY.....	3
3.1	TRAINING REQUIREMENTS	3
3.2	INTRODUCTION TO SAFETY	3
3.3	OWNER / USER / OPERATOR RESPONSIBILITIES	4
4	ELECTRIC CHAIN HOIST CONSTRUCTION.....	7
4.1	GENERAL HOIST CONSTRUCTION.....	7
4.2	LIFTING MEDIUM.....	7
4.3	POWER FOR OPERATION	7
4.4	SUSPENSION TYPES.....	8
4.5	DIRECTIONAL TRAVEL OF OVERHEAD HOISTS	9
4.6	PRINCIPAL PARTS OF AN ELECTRIC CHAIN HOIST	11
5	SAFE OPERATING PRACTICES.....	19
5.1	BEFORE EACH SHIFT OR THE FIRST TIME THE HOIST IS USED EACH SHIFT	20
5.2	BEFORE OPERATING A HOIST AND APPLYING A LOAD	22
5.3	MOVING THE LOAD	24
5.4	PARKING THE LOAD.....	25
5.5	HOIST LIMIT DEVICES.....	25
5.6	GENERAL RECOMMENDATIONS.....	26
5.7	RECOMMENDED GENERAL DO NOT’S.....	26
5.8	OPERATOR HAND SIGNALS.....	27
6	APPENDIX – A – DEFINITIONS OF ELECTRIC CHAIN HOIST TERMS.....	28
7	APPENDIX – B – REFERENCES.....	30
8	APPENDIX – C – RECOMMENDED PRACTICES – ELECTRIC POWERED HOISTS.....	32