

8 APPENDIX – C – RECOMMENDED PRACTICES – ELECTRIC POWERED HOISTS

RECOMMENDED PRACTICES - ELECTRIC POWERED HOISTS

Because R&M Materials Handling, Inc. has no direct control over the hoist and its operation, conformance with good safety practice is the responsibility of the user and operating personnel. ANSI/ASME B30.16 has been used as a guide in preparing this list of **SHALL's** and **SHALL NOT's**. Ask your supervisor for a copy. Each is identified according to **ANSI / NEMA Z535.4** with either the signal word **CAUTION** or **WARNING** to indicate the degree of seriousness



WARNING:

Improper operation of a hoist can create a potentially hazardous situation, which, if not avoided, could result in death or serious injury. To avoid such a potentially hazardous situation, the operator **SHALL**:

1. **NOT** operate a damaged, malfunctioning or unusually performing hoist.
2. **NOT** operate the hoist until you have thoroughly read and understand the Operator's Manual and the Installation and Maintenance Manual provided with this hoist.
3. **NOT** operate a hoist that has been modified without the manufacturer's approval or without certification that it is in conformity with ANSI/AMSE B30 volumes.
4. **NOT** lift more than rated load for the hoist.
5. **NOT** use hoist with twisted, kinked, damaged, or worn load chain.
6. **NOT** use the hoist to lift, support, or transport people.
7. **NOT** lift loads over people.
8. **NOT** operate a hoist unless all persons are and remain clear of the supported load.
9. **NOT** operate unless load is centered under hoist.
10. **NOT** attempt to lengthen the chain or repair damaged load chain.
11. Protect the hoist's chain from weld splatter or other damaging contaminants.
12. **NOT** operate hoist when it is restricted from forming a straight line from hook-to-hook in the direction of loading.
13. **NOT** use load chain as a sling, wrap load chain around load.
14. **NOT** apply the load to the tip of the hook or to the hook latch.
15. **NOT** apply load unless load chain is properly seated in the chain wheel(s) or sprocket(s).
16. **NOT** apply load if bearing prevents equal loading on all load supporting chains.
17. **NOT** operate beyond the limits of the load chain travel.
18. **NOT** leave load supported by the hoist unattended unless specific precautions have been taken.
19. **NOT** allow the load chain or hook to be used as an electrical or welding ground.
20. **NOT** allow the load chain or hook to be touched by a live welding electrode.
21. **NOT** remove or obscure the warnings on the hoist.
22. **NOT** operate a hoist on which the safety placards or decals are missing or illegible.
23. **NOT** operate a hoist unless it has been securely attached to a suitable support.
24. **NOT** operate a hoist unless load slings or other approved single attachments are properly sized and seated in the hook saddle.
25. Take up slack carefully – make sure load is balanced and load holding action is secure before continuing.
26. Shut down a hoist that malfunctions or performs unusually and report such malfunctions.
27. Make sure hoist limit switches function properly.
28. Warn personnel of an approaching load.

**CAUTION:**

Improper operation of a hoist can create a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury. To avoid such a potentially hazardous situation, the operator **SHALL**:

1. Maintain a firm footing or be otherwise secured when operating the hoist.
2. Check brake function by tensioning the hoist prior to each lift operation.
3. Use hook latches. Latches are to retain slings, chains, etc. under slack conditions only.
4. Make sure the hook latches are closed and not supporting any parts of the load.
5. Make sure the load is free to move and will clear all obstructions.
6. Avoid swinging the load or hook.
7. Make sure hook travel is in the same direction as shown on the controls.
8. Inspect the hoist regularly, replace damaged or worn parts, and keep appropriate records or maintenance.
9. Use the hoist manufacturer's recommended parts when repairing the unit.
10. Lubricate load chain per Installation and Maintenance Manual supplied with the hoist.
11. **NOT** use the hoist load limiting or warning device to measure load.
12. **NOT** use limit switches as routine operating stops unless allowed by manufacturer. They are emergency devices only.
13. **NOT** allow your attention to be diverted from operating the hoist.
14. **NOT** allow the hoist to be subjected to sharp contact with other hoists, structures, or objects through misuse.
15. **NOT** adjust or repair the hoist unless qualified to perform such adjustments or repairs.

DISCLAIMER

Under no circumstances does **R&M Materials Handling, Inc.** assume any liability for the use of these voluntary recommendations, and no warranty whatsoever is made in connection with them. The recommendations do not take precedence over existing plant safety rules and regulations, and OSHA regulations. It is the user's intent to absolve and protect **R&M Materials Handling, Inc.** from any and all liability, in tort or otherwise.