




# LoadMate®

## LM16 / 20 / 25 ELECTRIC CHAIN HOIST

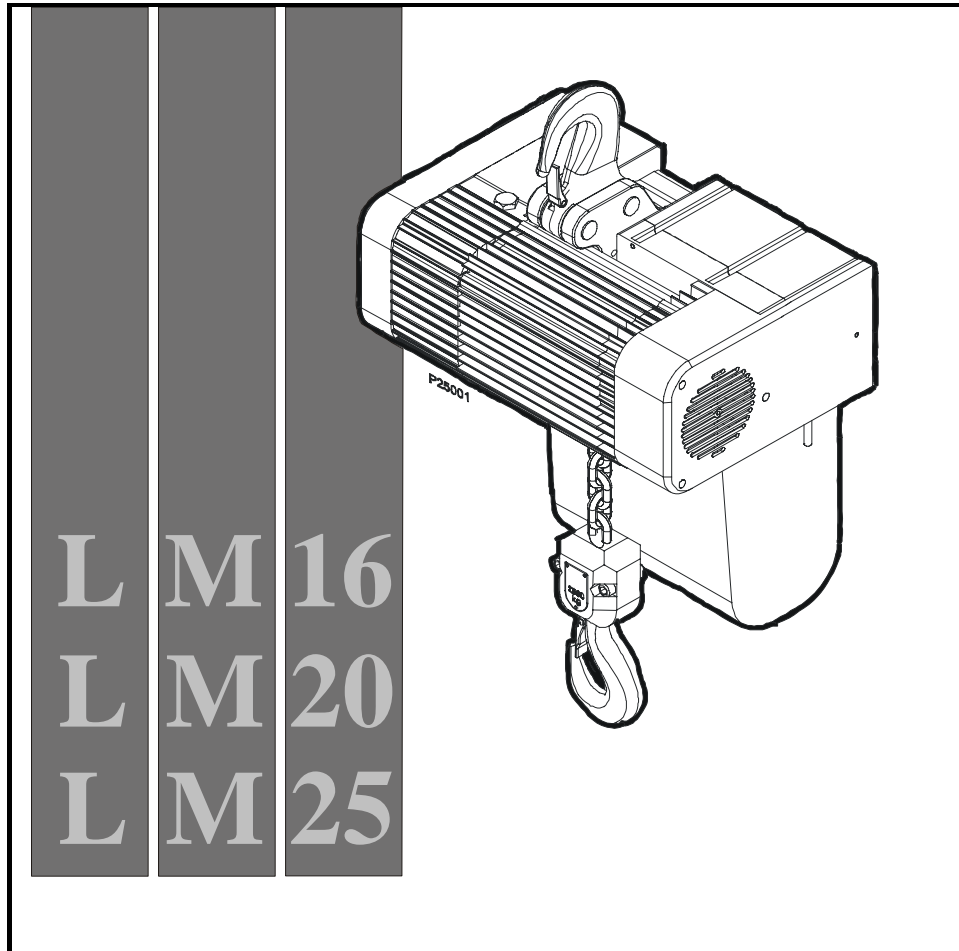

### INSTALLATION & MAINTENANCE INSTRUCTIONS

JOB NO. : \_\_\_\_\_

SERIAL NO. : \_\_\_\_\_

(RECORD HOIST SERIAL NUMBER FOR FUTURE REFERENCE)



® R&M Materials Handling, Inc  
Springfield, Ohio USA  
☎: 800 955-9967  
[www.rmhoist.com](http://www.rmhoist.com)

LoadMate® Chain Hoist  
LM16-20-25 Manual  
April 2005

**LEAVE THIS PAGE BLANK**



## TABLE OF CONTENTS

1	INTRODUCTION.....	1
1.1	Contact Information .....	1
1.2	Warranty.....	1
1.3	Disclaimer.....	1
1.4	Safety .....	2
1.5	Placards and Instructions .....	4
2	INSTALLATION.....	5
2.1	General.....	5
2.2	Chain Container Installation .....	5
2.3	Lubrication.....	5
2.4	Mounting.....	6
2.5	Load Hook Throat Opening .....	6
2.6	Electrical Connection .....	6
2.7	Three Phase Power Connections.....	7
3	INITIAL START-UP .....	8
3.1	General.....	8
3.2	Correcting the Direction of Hook Travel .....	8
3.3	Operational Checks – No Load .....	8
3.4	Operational Checks – With Load.....	9
4	HOIST OPERATION .....	10
5	MAINTENANCE .....	12
5.1	Construction .....	12
5.2	Hoist Motor and Brake Assembly .....	13
5.3	Torque Limiter (Refer to Figure 5.4).....	17
5.4	Load Chain.....	18
5.5	Maintenance Inspection .....	18
5.6	Load Chain Specifications (see Figure 5.5) .....	20
5.7	Removing the Load Chain.....	20
5.8	Installing the Load Chain.....	21
5.9	Fall Stop Assembly (Refer to Figure 5.8) .....	22
5.10	Chain Container .....	23
5.11	Upper and Lower Travel Safety Limit Switch .....	24
5.12	Upper and Lower Rotary Travel Limit Switch .....	24
5.13	Hooks .....	25
5.14	Hook Inspection .....	25
5.15	Hook Dimensions .....	26
5.16	Top Hook.....	27
5.17	Controls.....	28
5.18	Two Speed – Three Phase – 208 / 230 / 460 Volt – Power Circuit.....	30
5.19	Two Speed – Three Phase – 208 / 230 / 460 Volt – Control Circuit.....	31
5.20	Two Speed – Three Phase – 208 / 230 / 460 Volt – Push Button.....	32
5.21	Two Speed – Three Phase – 575 Volt – Power Circuit.....	33
5.22	Two Speed – Three Phase – 575 Volt – Control Circuit.....	34
5.23	Two Speed – Three Phase – 575 Volt – Push Button.....	35
6	PREVENTATIVE MAINTENANCE .....	37
6.1	Maintenance and Inspection Table .....	37



---

6.2	Lubrication.....	38
6.3	Recommended Technical Support for Various spare parts.....	39
6.4	Screw Tightening Torque (lb-ft) Specification .....	39
6.5	Troubleshooting .....	40
7	PARTS ILLUSTRATIONS .....	41
7.1	Basic Hoist Assembly.....	41
7.2	Hoist Gearbox Components .....	43
7.3	C16 / C20 / C25 Hoist Motor & Brake Assembly.....	45
7.4	Lifting Assembly – C16 Only .....	47
7.5	Lifting Assembly – C20/25 Only .....	49
7.6	C16 / C20 / C25 Electrical Control Assembly.....	51
7.7	Push Button Assembly –Vertical Pairs of Buttons.....	53