




# LoadMate® LM10 ELECTRIC CHAIN HOIST

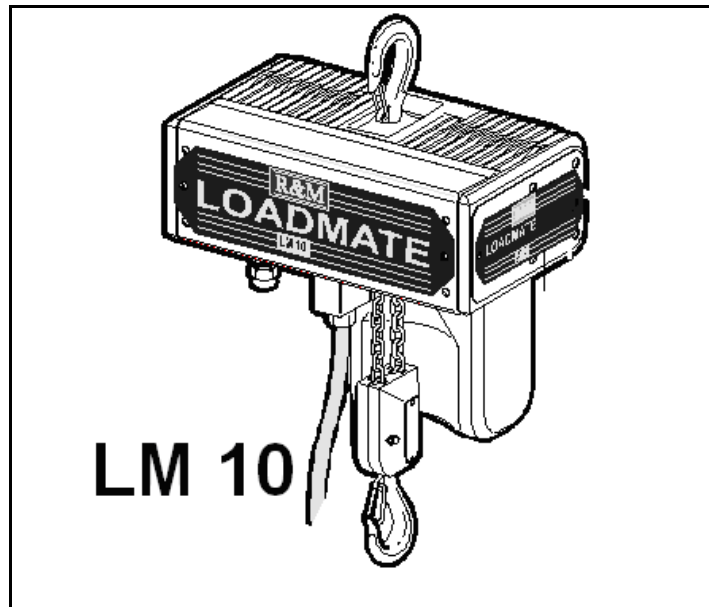

## INSTALLATION & MAINTENANCE MANUAL

JOB No.: \_\_\_\_\_

SERIAL No.: \_\_\_\_\_

(RECORD HOIST SERIAL NUMBER FOR FUTURE  
REFERENCE)



## TABLE OF CONTENTS

<b>1</b>	<b>INTRODUCTION.....</b>	<b>1</b>
1.1	Contact Information .....	1
1.2	Warranty .....	1
1.3	Disclaimer.....	1
1.4	Safety.....	2
1.5	Placards and Instructions .....	4
<b>2</b>	<b>INSTALLATION.....</b>	<b>5</b>
2.1	General .....	5
2.2	Lubrication .....	5
2.3	Mounting.....	6
2.4	Load Hook Throat Opening .....	6
2.5	Electrical Connection.....	7
2.6	Three Phase Power Connections.....	7
<b>3</b>	<b>INITIAL START-UP.....</b>	<b>8</b>
3.1	General .....	8
3.2	Correcting the Direction of Hook Travel .....	8
3.3	Operational Checks – No Load .....	9
3.4	Operational Checks – With Load.....	9
<b>4</b>	<b>HOIST OPERATION.....</b>	<b>10</b>
<b>5</b>	<b>MAINTENANCE.....</b>	<b>11</b>
5.1	Basic Hoist Construction .....	11
5.2	Motor / Body .....	11
5.3	Hoist Motor Brake and Load-Limiting Device.....	12
5.4	Slip Clutch Adjustment .....	12
5.5	Hoist Motor Brake Adjustment.....	14
5.6	Load Chain .....	15
5.7	Maintenance Inspection.....	15
5.8	Load Chain Specifications.....	16
5.9	Removing the Load Chain.....	16
5.10	Installing the Load Chain .....	17
5.11	Fall Stop Assembly .....	18
5.12	Removing Fall Stop (Figure 5.7).....	18
5.13	Installing Fall Stop (Figure 5.7).....	19
5.14	Chain Container.....	19
5.15	Upper and Lower Travel Safety Limit Switch.....	20
5.16	Hooks .....	21
5.17	Hook Inspection .....	22
5.18	Top Hook Removal and Installation.....	23
5.19	Control Changes and Fuses .....	24
5.20	Single-Speed Solo Hoist – 208 Volt Wiring Diagram.....	26
5.21	Single-Speed Solo Hoist – 230 Volt Wiring Diagram.....	27
5.22	Single-Speed Solo Hoist – 460 Volt Wiring Diagram.....	28
5.23	Two-Speed Solo Hoist - 208 Volt Wiring Diagram.....	29
5.24	Two-Speed Solo Hoist - 230 Volt Wiring Diagram.....	30
5.25	Two-Speed Solo Hoist - 460 Volt Wiring Diagram.....	31
5.26	Two-Speed Solo Hoist – 575 Volt Wiring Diagram.....	33
5.27	Single-Speed Hoist – Modular Crane – 208 Volt Diagram .....	34
5.28	Single-Speed Hoist – Modular Crane – 230 Volt Diagram .....	35
5.29	Single-Speed Hoist – Modular Crane – 460 Volt Diagram .....	36
5.30	Two-Speed Hoist – Modular Crane – 208 Volt Diagram .....	37



5.31	Two-Speed Hoist – Modular Crane – 230 Volt Diagram .....	38
5.32	Two-Speed Hoist – Modular Crane – 460 Volt Diagram .....	39
5.33	Two-Speed Hoist – Modular Crane – 575 Volt Diagram .....	40
<b>6</b>	<b>PREVENTATIVE MAINTENANCE .....</b>	<b>41</b>
6.1	Recommended Periodic Maintenance and Inspection Table.....	41
6.2	Lubrication .....	42
6.3	Recommended technical support for various spare parts.....	43
6.4	Screw Tightening Torque (lb-ft) Specification .....	43
6.5	Troubleshooting.....	44
<b>7</b>	<b>PARTS ILLUSTRATIONS.....</b>	<b>45</b>
7.1	Hoist Body .....	45
7.2	Gear Mechanism With Motor Brake - Version A .....	47
7.3	Gear Mechanism with Motor Brake - Version B .....	49
7.4	Lifting Assembly.....	51
7.5	Controls .....	53
7.6	Push Button Assembly – Vertical Pairs of Buttons.....	55
7.7	Push Button Assembly – Horizontal Pairs of Buttons .....	57
7.8	Upper & Lower Limit Switch .....	58