

English
22.2.2007

RACON SERIES II RADIO CONTROL SERVICE MANUAL





R&M Materials Handling, Inc.
 4501 Gateway Boulevard
 Springfield, Ohio 45502
 P.: (937) 328-5100
 FAX: (937) 325-5319



Read the instructions supplied with the product before installation and commissioning.



Keep the instructions in a safe place for future reference.

Table of content

1 MAJOR UPDATE HISTORY (ONLY IN ENGLISH).....	3	7 ACCESS TO THE HOIST CONDITION MONITORING UNIT.....	21
2 SAFETY PRECAUTIONS.....	4	7.1 General Description of Service Mode	21
3 DESCRIPTION.....	5	7.2 Entering the Service mode.....	21
3.1 General.....	5	7.3 Keys for moving within the Menus.	22
3.2 System Specifications.....	5	7.4 Switching from Tared Load to Actual Load.	22
4 TRANSMITTER.....	7	7.5 Resetting the Tared Load.....	22
4.1 Transmitter summary.....	7	7.6 Exiting Service mode.	22
4.2 Exploded RAD-TS Transmitter	8	7.7 Messages originated in the receiver.	23
4.3 Exploded RAD-TF Transmitter	8	8 EEPROM.....	24
4.4 Exploded RAD-TH Transmitter	9	8.1 Description	24
5 RECEIVER.....	11	8.2 Replacement EEPROM from Transmitter to Transmitter	25
5.1 Receiver Summary	11	8.3 Copying EEPROM from Receiver to Transmitter	26
5.2 Exploded RAD-RS, RAD-RF and RAD-RH Receiver.....	12	9 TROUBLESHOOTING.....	29
5.3 The BC70K battery charger.....	12	9.1 Drawings	29
5.4 RADS11 Receiver Connections.....	14	9.1.1 Transmitter board.....	29
5.5 RADF13 Receiver Connections.....	15	9.1.2 Receiver board.....	30
5.6 RADH11 Receiver Connections	16	9.2 LED indications	31
6 FREQUENCY MANAGEMENT.....	17	9.3 General System Check	31
6.1 System description	17	9.3.1 Chart S0.....	31
6.2 Definitions.....	17	9.4 System totally downs	32
6.3 Frequency settings	17	9.4.1 Chart S1.....	32
6.3.1 Entering in frequency programming mode	17	9.4.2 Chart T1.....	33
6.3.2 Frequency programming mode.....	18	9.4.3 Chart T2.....	34
6.3.3 Exiting the frequency programming mode.....	19	9.4.4 Chart T2.....	35
6.4 Frequency lists.....	20	9.5 Failure of one of the functions.....	36
6.4.1 EU countries	20	9.5.1 Chart S2.....	36
6.4.2 USA and Canada.....	20	9.6 Intermittent failures.....	37
		9.6.1 Chart S3.....	37