



R&M Materials Handling, Inc
Springfield, Ohio USA
☎: 800 955-9967
www.rmhoist.com

STAGEMAKER® COMPACT Concert Hoist
SM10 Installation & Maintenance Manual

June 2006

STAGEMAKER® CONCERT ELECTRIC CHAIN HOIST



SM10

INSTALLATION & MAINTENANCE MANUAL

JOB NO.: _____

SERIAL NO.: _____

(RECORD HOIST SERIAL NUMBER FOR FUTURE REFERENCE)



®
R&M Materials Handling, Inc
Springfield, Ohio USA
☎: 800 955-9967
web: www.rmhoist.com

STAGEMAKER® COMPACT Concert Hoist
SM10 Installation & Maintenance Manual

June 2006

(LEAVE THIS PAGE BLANK)



TABLE OF CONTENTS

1	INTRODUCTION	1
1.1	Contact Information	1
1.2	Warranty	1
1.3	Disclaimer	1
1.4	Safety	2
1.5	Placards and Instructions	4
2	INSTALLATION	5
2.1	General	5
2.2	Lubrication	5
2.3	Mounting	6
2.4	Load Hook Throat Opening	7
3	ELECTRICAL CONNECTIONS & DIAGRAMS	9
3.1	Control Circuit Fuses	9
3.2	Configuration A – Single Speed – 208 / 230 Volt Connections	10
3.3	Configuration A – Pigtail Pin-out connections – R&M Standard	11
3.4	Configuration B – Single-speed – 208 Volt Connections	12
3.5	Configuration B – Single-speed – 208 Volt Wiring Diagram	13
3.6	Configuration B – Single-speed – 230 Volt Connections	14
3.7	Configuration B – Single-speed – 230 Volt Wiring Diagram	15
3.8	Configuration B – Single-speed – 460 Volt Connections	16
3.9	Configuration B – Single-speed – 460 Volt Wiring Diagram	17
3.10	Configuration B – Wiring Diagram Labels	18
3.11	Configuration B – Pigtail Pin-out Connections – R&M Standard.....	19
3.12	Configuration C – 230 Volt Single Speed Connections	20
3.13	Configuration C – Power Circuit - 230V Wiring Diagram	21
3.14	Configuration C – Control Circuit - 230V Wiring Diagram	22
3.15	Configuration C – Wiring Diagram Labels	23
3.16	Configuration C – Pigtail Pin-out Connections – R&M Standard.....	24
3.17	Cable Assemblies.....	25
4	INITIAL START-UP.....	27
4.1	General	27
4.2	Correcting the Direction of Hook Travel	27
4.3	Operational Checks – No Load	28
4.4	Operational Checks – With Load	28
5	HOIST OPERATION	29
6	MAINTENANCE.....	30
6.1	Basic Hoist Construction (Inverted Position).....	30
6.2	Basic Hoist Construction (Normal Suspension)	31
6.3	Motor / Body	32
6.4	Hoist Motor Brake and Load-Limiting Device.....	32
6.5	Motor Brake Specifications	32
6.6	SM10 Motor Data – 60HZ MOTORS.....	32



6.6.1	Slip Clutch Operation – Reference Figure 6.3.....	33
6.6.2	Slip Clutch Adjustment after Installation.....	35
6.6.3	Hoist Motor Brake Adjustment	36
6.7	Load Chain.....	38
6.7.1	Load Chain Inspection.....	38
6.7.2	Load Chain Specifications (see Figure 6.5).....	39
6.7.3	Removing the Load Chain	40
6.7.4	Installing the Load Chain.....	41
6.8	Fall Stop Assembly	43
6.9	Removing fall stop (Figure 6.6).....	43
6.10	Installing fall stop (Figure 6.6)	43
6.11	Chain Container Installation (Normal Position).....	44
6.12	Limit Switches	45
6.12.1	Upper and Lower Travel Safety Limit Switch	45
6.12.2	Rotary Geared Limit Switch	45
6.12.3	Rotary Geared Limit Switch Assembly Part Numbers	46
6.13	Hooks	47
6.13.1	Hook Inspection	49
6.13.2	Body Hook (Normal Position)	50
7	PREVENTATIVE MAINTENANCE	51
7.1	Maintenance and Inspection Table.....	51
7.2	Lubrication.....	52
7.3	Recommended technical support for various spare parts.....	53
7.4	Torque (lb-ft) Specifications.....	53
7.5	Troubleshooting.....	54
8	PARTS ILLUSTRATION.....	55
8.1	Hoist Body	55
8.2	Gear Mechanism With Motor Brake.....	57
8.3	Load Chain & Lifting Hardware.....	59
8.4	Electrical Enclosure – 3 Phase Power Supply – Configuration A	61
8.5	Controls – Configuration B	62
8.6	Controls – Configuration C	63
8.7	Chain Guide Assemblies	64
8.8	Rotary Limit Switch.....	65
8.9	Connectors for Pigtails.....	65
8.10	Pickle Assembly.....	66