



R&M Material Handling, Inc.
4501 Gateway Boulevard
Springfield, Ohio 45502
☎: (937) 328-5100
www.rmhoist.com



Updated: August 2011

Minimum computer requirements to run QuoteMaster® :

Supported operating system:



WIN XP Pro + Service pack 3 (or later) or Windows 7 Professional

(The Home edition of Windows XP and Windows 7 does not work with QuoteMaster. Windows Vista is not supported and may not be compatible to run QuoteMaster.)

Hardware:



Processor: minimum Intel 1.5GHz or some other processor with the same power

RAM memory: 512MB minimum, 1G is preferred on newer systems.

Hard disc minimum space needed: 2GB or more, especially if there will be a lot of calculations stored in the database on the hard drive.

Software:



Microsoft Office + Microsoft Word

Web browser:



Internet Explorer 6.0 or 8.0 (Do not use IE7.)

Internet Explorer - set as the default web browser

(Internet Explorer must be used for the internet-related functions such as the installation and updates, EDI, and the DAS tool. Other web browsers like Firefox, Google Chrome are not compatible.)